

Flying Tiger 10 tuning guide Base settings



Uppers:

Tension 36 (PT2 Loos gauge)

D1's

Tension 30 (PT2 loos gauge)

D2's

Tension 32 (PT2 Loos gauge)

J Measurement: Measured from Forestay pin below furler to front face of mast just above collar:
3700mm

Mast butt: Should be positioned as far forward on the step as possible






Forestay length

Take the jib halyard and hold it alongside the mast, while keeping firm tension on the halyard mark the halyard where it meets the top of the deck collar.

Now swing the halyard out to the forestay and pulling the halyard tight mark the forestay alongside the mark you have previously put on the halyard.

Measure down from this mark to the bolt above the furler where the forestay attaches. This should be *870mm*

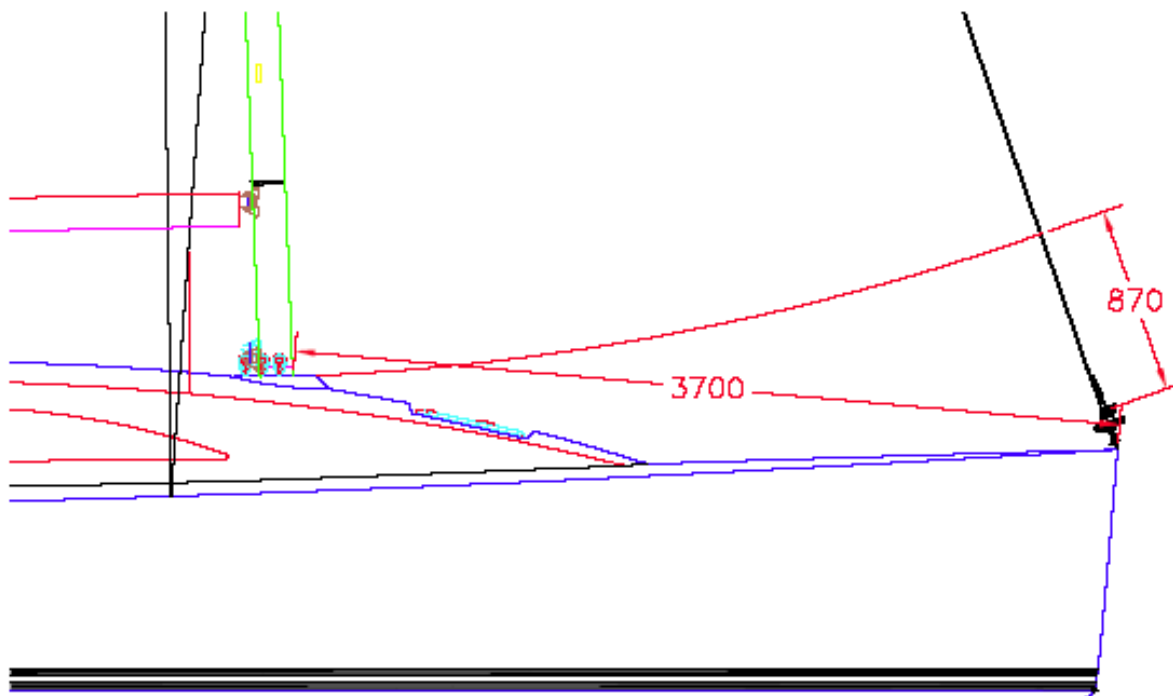

Quick tune adjustments (*All turns from base*)

TWS	Uppers	D1	D2
0-6	-2 turns	-2 turns	-1 turn
7-12	Base	Base	Base
12-16	+2 turns	+2 turns	+1 turn
16 +	+3 turns	+3 turns	+2 turns